

USERS MANUAL

MODULO® 450 **MODULO® 18Î**

CONFORM TO EUROPEAN NORM EN 1808 Ë MARCH 1999 MACHINE DIRECTIVE 2006/42/EC





Manufacturer

POWER CLIMBER B.V.B.A. Satenrozen 7

B- 2550 Kontich **BELGIUM**

Tel. +32-3-451 05 00

Fax: +32-3-451.05.01

Tel: +32-3-451.05.00

e-mail: Info@PowerClimber.be

Website: www.PowerClimber.be

Issue date: 07-may-2003 Reference: 38762-E Revision: B Page: 1 of 11





Contents

Contents	2
Overview	3
Exploded view of platform with end stirrups	3
View of platform with walk through stirrups (WTS)	4
Major dimensions	5
Load table platform	6
Customized sections	6
SafeFix pin system	7
Mounting	8
1) Assembling the U-frames and guard rail posts	8
2) U-frames & Side frames:	8
3) Assembling End Frame with Stirrup	9
4) Floor	9
5) Guard rail	10
6) Wall Rollers	10
7) Walk through stirrun	11

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 2 of 11




Tel. +32-3-451 05 00



Overview

- The modular design of the MODULO® 450 / MODULO® 18+suspended platform allows you to modify the configuration of the standard components to obtain the platform length required. These components are secured together by using the patented SafeFix pin system.
- All components fit through a manhole of dia. 450mm (or 18 inch)

Exploded view of platform with end stirrups

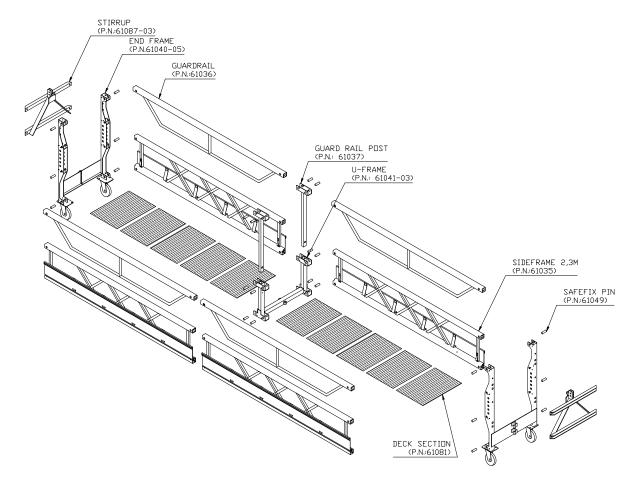

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 3 of 11




Tel. +32-3-451 05 00



Overview

View of platform with walk through stirrups (WTS)

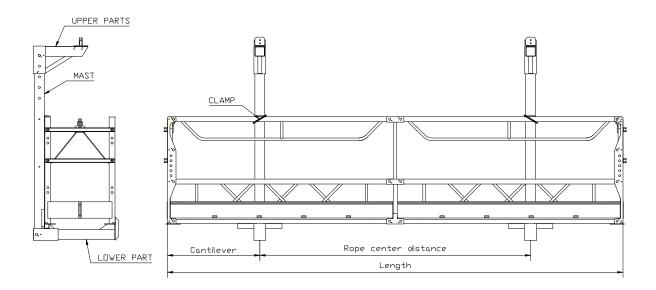

Check before every use:

- 1. All pins have to be in horizontal (closed) position.
- 2. Check the condition of the Safe Fix pins:
 - Pressure in horizontal (closed) position
 - · Condition of the spring and spring holder
- 3. Check condition of all holes in de side frame, U-frame and stirrup.
- 4. Check the condition of the floor retainers. (4 springs on each deck section)

Guidelines for use of Astro-hoist, see manual 38701-E

The cable retainers of the power supply have to be hooked onto the mid rail or cross braces.

The lifeline (personal security) has to be hooked onto the mid rail.


Wind restrictions at 12m/s.

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 4 of 11

TSO 7 Tel. +32-3-451 05 00



Major dimensions

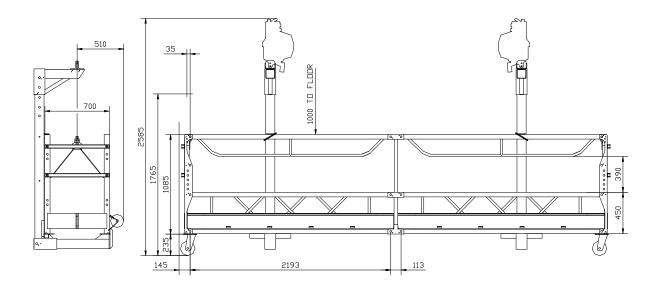

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 5 of 11



Tel. +32-3-451 05 00



Load table platform

MODULO® 450				Hoist capacity (kg) (WLL)						
				500		600		800		
Length	No. of sections	Max. load per meter	Self-weight (platform only)	Max. Cantilever	Max. rated load	Max. no. of persons	Max. rated load	Max. no. of persons	Max. rated load	Max. no. of persons
(m)		(kg/m)	(kg)	(m)	(kg)		(kg)	_ 1	(kg)	
2.3	1	186	100	0.5	430	2	43	ΛV	430	2
4.6	2	130	160	1_	39	5	90	5	600	5
6.9	3	120	20		4 7	4	570		690	7
9.2			2 (C			4	610	6	640	7
11	5		3.0	1. 5	350	3	440	4	440	4

Remark: Other numbers of cantilever and loadings on request.

Customized sections

For special applications, special lengths of Modulo sections are available. For these platforms, the following restrictions apply:

- maximum section length available is standard 2.3m.
- a platform with end-stirrups should not be configured with more than 5 U-frames.
- a platform with walk-through stirrups should not be configured with more than 5 U-frames between the stirrups and not more than 1 U-frame on each cantilever section.
- a platform with either end-stirrups or walk-through stirrups, can be configured with up to two special sections only, and these can only be placed at each end of the platform.


Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 6 of 11

ISO 9001

Tel. +32-3-451 05 00



SafeFix pin system

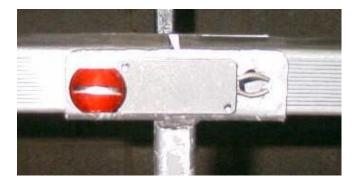

The patented Safe Fix pin system is a one step % sert and snap+method to assemble MODULO® platform components. The slotted pin is fixed in place by a spring mounted on the stirrup or U-frame.

Insertion:

- Line the pin up with the hole, so that the slot at the base of the pin is horizontal.
- Push the pin in from outside until the spring clicks in the grooves on the shaft of the pin. If required, rotate the pin till the slot is horizontal and the springs are in place.
- Make sure the pin is secured.



Tel. +32-3-451 05 00




Removal:

• Rotate the pin ¼ turn till the slot is vertical (and the springs are no longer in the grooves) and pull the pin out.

Fax +32-3-451 05 01

Note: The pin can be positioned with the use of a hammer and a screwdriver.

ATTENTION: Life span of springs: Springs have to be replaced when they no longer exert pressure on the grooves of the pin shaft.

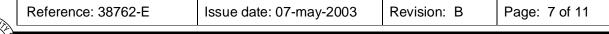

E-mail: Info@PowerClimber.be

Website: www. PowerClimber.be The user must ensure that the equipment complies with local rules and regulations.



Mounting

1) Assembling the U-frames and guard rail posts


An assembled U-frame exists of:

U-frame

2 pins

2 guardrail posts

Lock with Safe Fix Pin

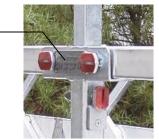


Slide both guard rail posts into the U-frame and lock with Safe Fix pin.

2) U-frames & Side frames:

Begin assembly by mounting the side frames on the U-frames. Secure each side frame to the U-frame with 2 Safe Fix pins.

Once one U-frame is mounted start with the next U-frame.



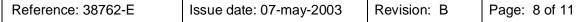

ISO POOL SEED OF THE POOL OF T

Tel. +32-3-451 05 00




Mounting (cont.)

3) Assembling End Frame with Stirrup

Unfold the end frame Secure the stirrup to the end frame (with 4 x M12 bolts). Connect end frame to side frames with 4 Safe Fix Pins.

2 bolts M12 at each side

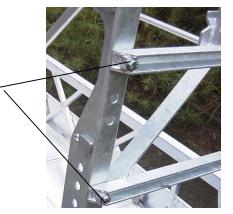

4) Floor

Put in floor (flat side up) as shown.



Check that all 4 retaining springs are in place.



NOTE:

Tel. +32-3-451 05 00

To remove floor, push on the spring and lift floor at the same time. Five decks are required to cover one section.

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 9 of 11





Mounting (cont.)

5) Guard rail

Mount guard rails, inserting 2 Safe Fix pins in each end.



Remarks: Never stand on the guardrail or midrail while platform is in use.

6) Wall Rollers

Tel. +32-3-451 05 00

Loosen screws to insert the wall rollers in the grooves of the side frame. The wall roller can be located anywhere along the length of the side frame as required. Use minimum 2 wall rollers and put them wide apart.





Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 10 of 11





Mounting (cont.)

7) Walk through stirrup



- Fit the upper part at desired height and lock with Safe Fix pin.
- Hang the mast over the midrail and screw on the two bolts (do not yet tighten, see below). Make sure that position is in line with the suspension points, otherwise the slack rope safety mechanism will not work properly.
- Fit the lower part into the mast and lock with the second Safe Fix pin.





Tel. +32-3-451 05 00

- Mount the hoist and put the steel wire ropes in the rope guiders.
- When mounting the hoist check the orientation of the hoist.
- Suspend minimum 6 kg on the suspension rope.
- Suspend minimum 12 kg on the safety rope.
- Lift the platform a few centimeters and screw the bolts tighter.

Reference: 38762-E Issue date: 07-may-2003 Revision: B Page: 11 of 11

ISO 9001